



10 YEAR COLOUR WARRANTY

Your
 Aluminium Flashing Solution
 For
 All Wall Abutments


Terreal Dry Flash is a perfect solution for abutment providing better and neat finishing. Terreal Dry Flash is an aluminium product with highest degree of flexibility, thanks to continuous corrugation and multiple pre-fabricated bending lines.

• **Full Aluminium product**

- ▶ highly durable and weather resistant

• **Pre-determined bending lines**

- ▶ easy to bend at wall

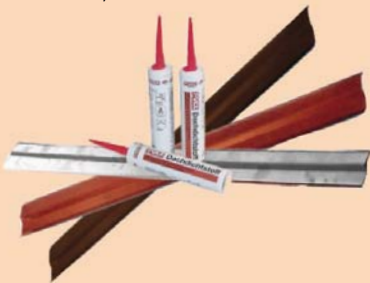

• **High quality colour coating**

- ▶ durable UV-resistance
- ▶ high material break resistance
- ▶ self cleaning properties

• **Butyl adhesive strips**

- ▶ additional security against rain

• **Continuous corrugation**

- ▶ stretch factor of 30%
- ▶ perfect mouldability on tile surface

Technical information


- ▶ Body : Aluminium, corrugated and coloured
- ▶ Width : 30cm
- ▶ Length : 5m
- ▶ Standard colours :
 -  Terracotta
 -  Lead
 -  Grey

Terreal Flash Strip

Terreal Flash Strip is installed over the top edge of Dry Flash. This is to further secure the Dry Flash to the wall in case of paint peeling in the future.

Technical information

- ▶ Body : Clean colourbond zincalume strip
- ▶ Length : 1m
- ▶ Height : 80mm
- ▶ Thickness : 0.47mm
- ▶ Standard colours : Terracotta / Lead / Grey

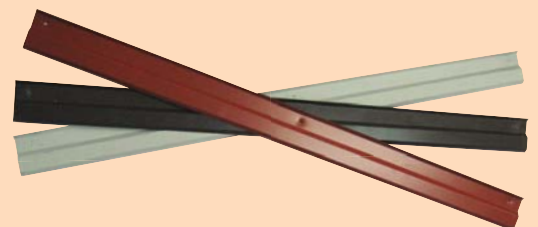

Terreal Dry Flash

ABUTMENT SOLUTION

The surface has to be clean and dry before application

Application steps

STEP 1



Cut the Dry Flash [Chimney Width + 4cm] bend it at the pre-determined bending lines and press it against the chimney wall. The bending line should be at the same spot as the contact line of the roof with the chimney wall.

STEP 2



Bend the 2 parts on both sides away from the chimney. Remove the protective foil from the upper adhesive strip and fix the Dry Flash horizontal on the chimney wall.

STEP 3



Remove the protective foil from the lower adhesive strip and form it on the tiles.

STEP 4



Determine the length of the side part [bottom edge of front side + lengths of the chimney + 25cm)] and bend it again at the precast lines. Remove protection foil and start pressing the Dry Flash from the lower part upwards to the top of the chimney. Proceed with fixation on the tiles from bottom to top.

STEP 5



Cut off the side part so that 2cm can be bended down over the up-standing front-side.

STEP 6



Turn down carefully the overlap of the side-part over the front flap and press the standing seam against the chimney wall.

STEP 7



Install Terreal Flash Strip over the top edge of Dry Flash and fasten the Strip with rust resistant screw or nail.

STEP 8



The upper seam must be sealed with sealing compound.

Your Aluminium Flashing Solution For All Wall Abutments

